


1. DEMOLISH EXISTING RACEWAY AND CONDUCTORS FROM MAIN SWITCHBOARD TO EXISTING ROOF TOP MECHANICAL EQUIPMENT. EXISTING SWITCHBOARD SWITCHES SHALL REMAIN.
2. PROVIDE NEW FUSES AS INDICATED IN EXISTING SWITCH. PROVIDE FUSE REDUCERS AS REQUIRED.
3. PROVIDE INNOVATIVE TECHNOLOGIES PTX-160-3Y-101-MT SURGE SUPPRESSOR. INSTALL DIRECTLY ADJACENT TO SWITCHBOARD AS TO KEEP CONDUCTORS AS SHORT AS POSSIBLE. CONTACT PANELA DOFF AT MORRIS TECHNOLOGIES, 206.982.9895 FOR INSTALLATION INSTRUCTIONS AND INSPECTION.

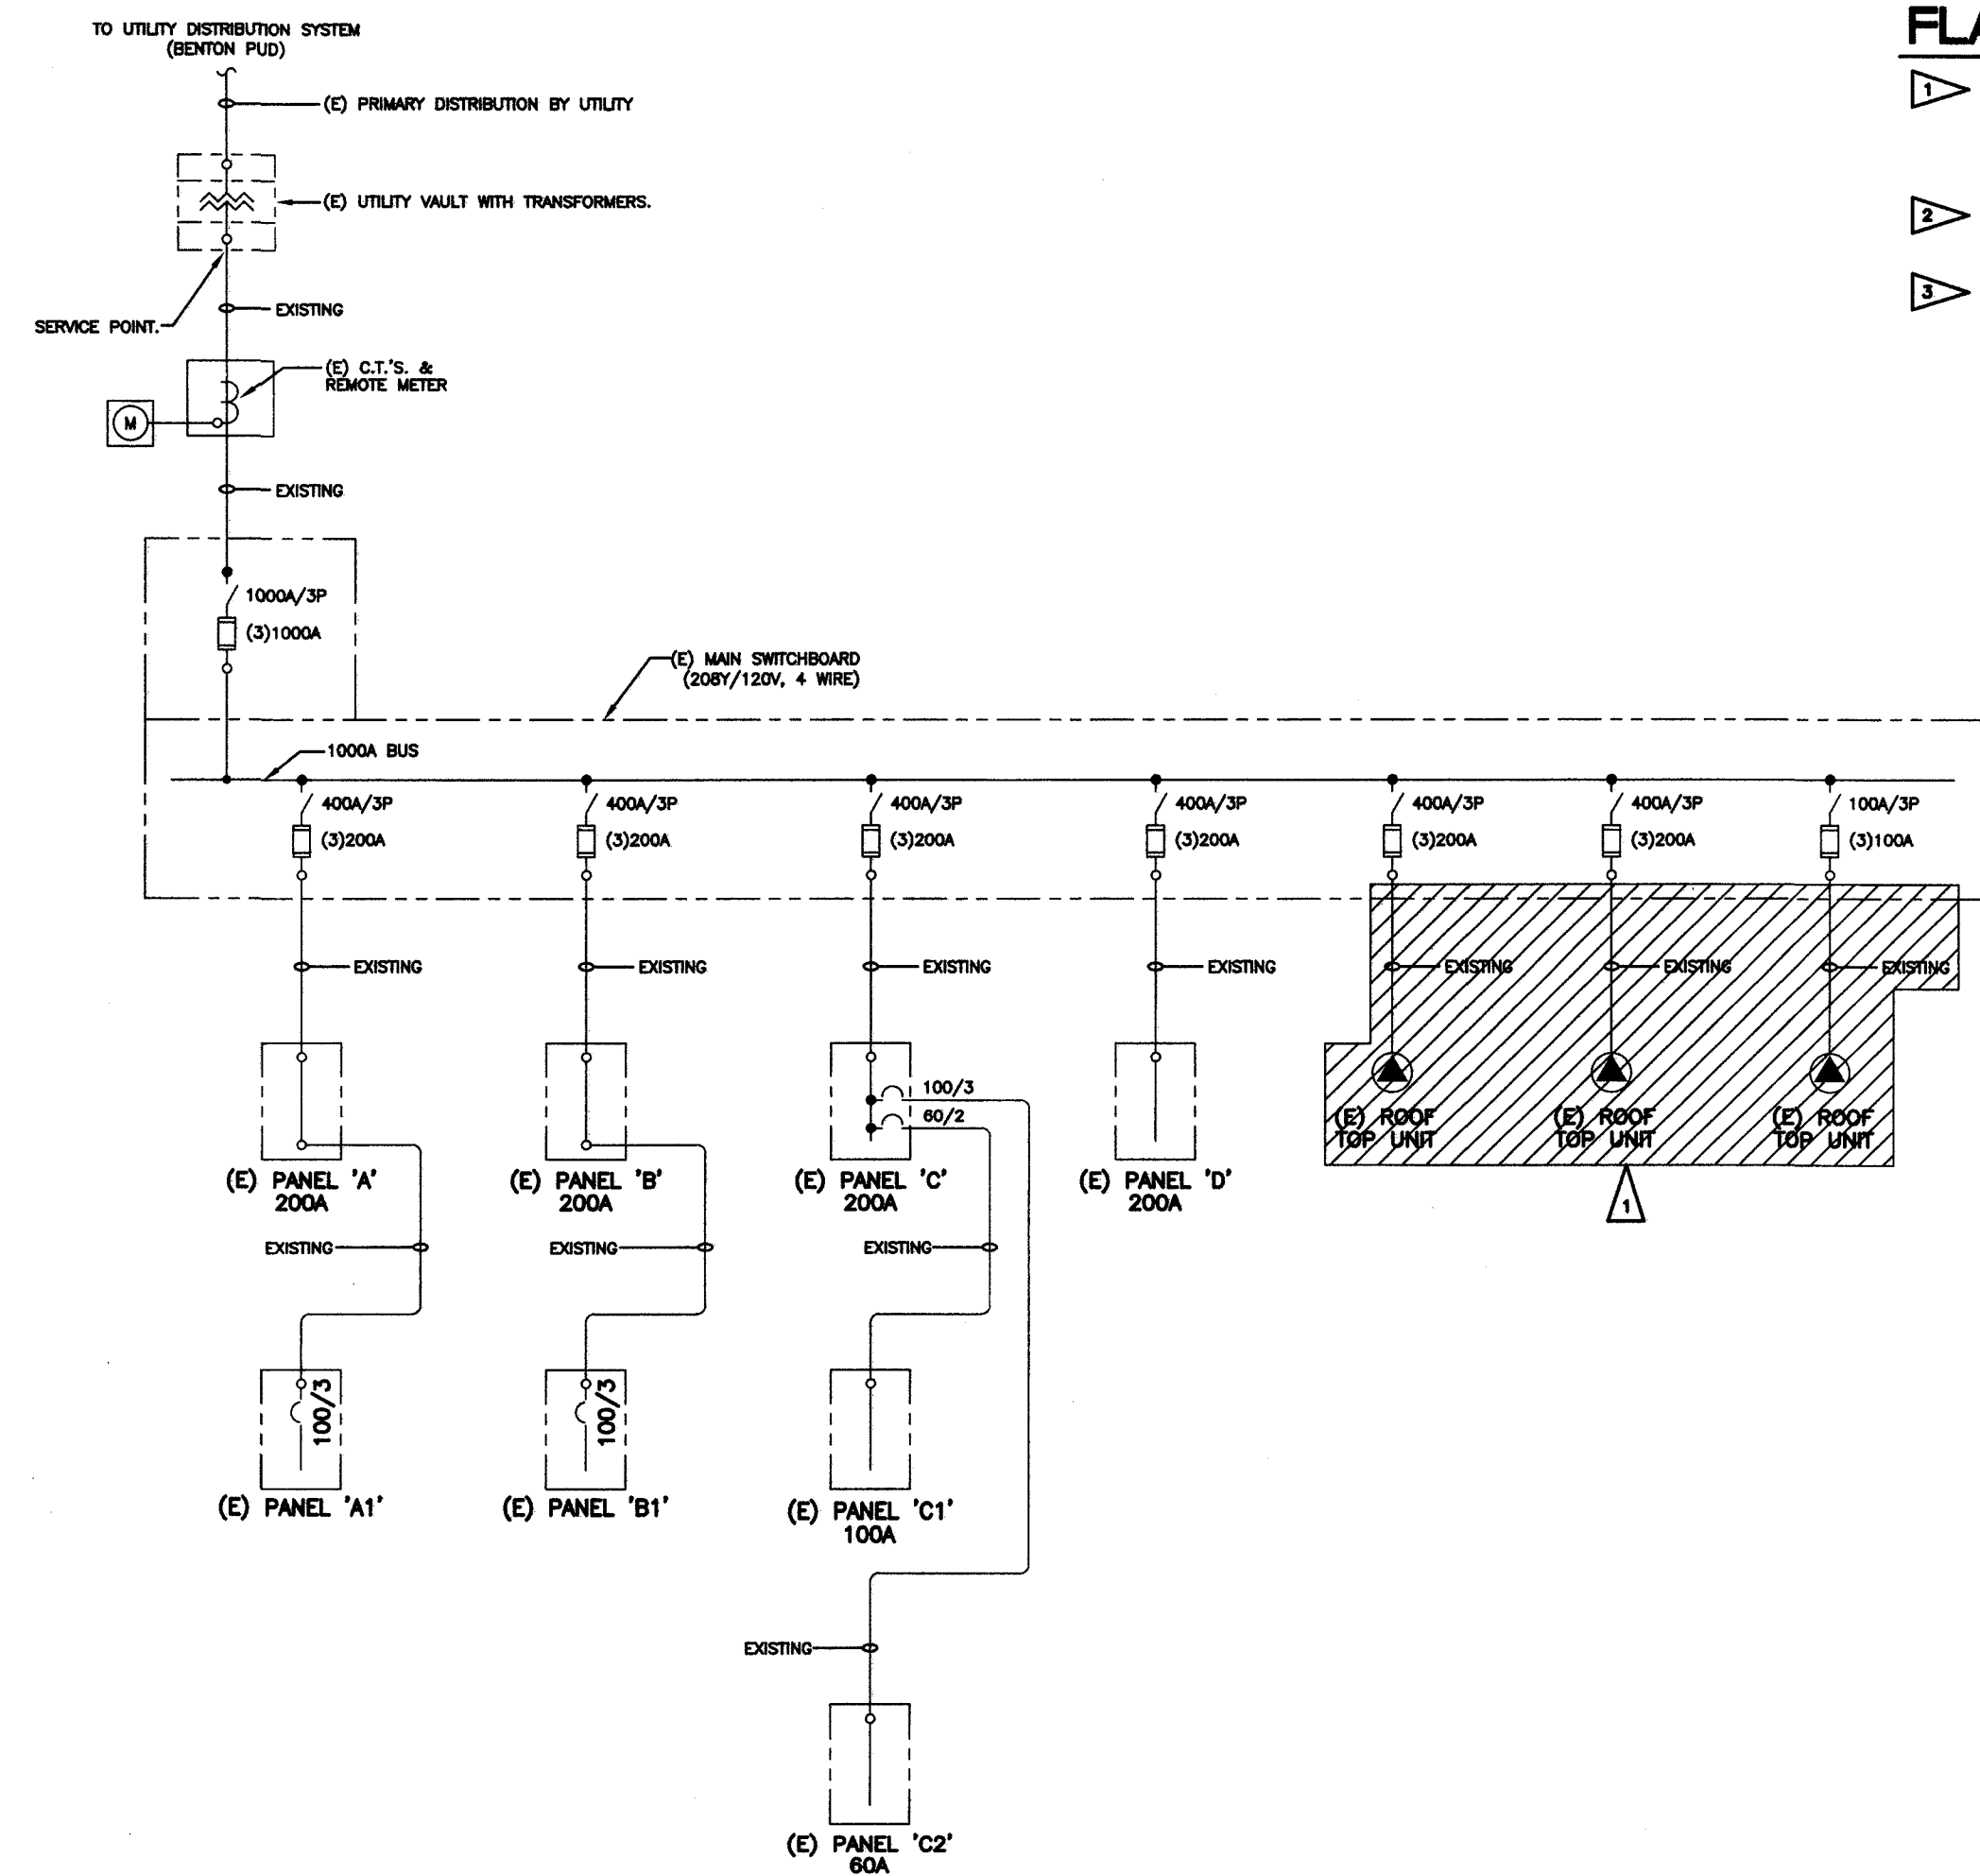

SCALE NONE

SCALE NONE